

Installation Instructions

1. Turn off ignition. If old lift support has a window defogger electrical connector, carefully disconnect the fittings.
2. Before removing old lift supports, examine any hardware provided to determine which components must be reused.
3. Have someone hold the hatch, hood, trunk or rear window open while replacing the lift support. DO NOT USE A PROP ROD.
4. The new lift support must be installed in the same position as the old one which was removed. Unless otherwise instructed. Do not nick or scratch chrome rod.
5. Compare the end connectors of your lift support to the illustrations provided and see below for additional instructions.
6. Do Not Remove both lift supports at the same time. Replace one, then remove and replace the second one.

Removable Ball Connectors

Figure: 1,2 & 3

- Remove old lift support by prying the retaining ring, cap lock or the security lock ring.
- Press new lift support onto ball stud and properly install retainer.

Eyelet Connector

Figure: 4 & 5

- Remove old lift support by unscrewing the mounting bolt or removing the retaining clip.
- Install new lift support by reusing mounting bolt or retaining clip.

Eyelet Connector W/Retaining Clip

Figure: 6

- Remove old lift support by prying the retaining clip off.
- Install new lift support by pressing against the vehicle mounting stud until the retaining clip snap into place.

Keyhole Slot Connector

Figure: 7

- Slide the lift support so the key hole slot can be lifted off the vehicle mounting stud.
- Install the new lift support by sliding the key hole slot over the vehicle mounting stud.

